

Installation Guide for GeoVision Surveillance System

Welcome to Installation Guide for GeoVision Surveillance System

This manual provides the following instructional aids to guide you through the installation of GeoVision Surveillance System:

- **Video Capture Cards**
- **Hardware Accessories**
- **Software Installation**
- **Overview of Main Screens**
- **Troubleshooting**

Table of Contents

Chapter 1 Video Capture Cards

1.1	GV-1120, 1240, 1480	2
1.2	GV-650, 800	5
1.3	GV-600	9
1.4	GV-250	13
1.5	Installing Drivers	17
1.6	Connecting Hardware Watchdog	19
1.7	Comparison Chart	20

Chapter 2 Hardware Accessories

2.1	GV-Hybrid Card	24
2.2	GV-Loop Through Card	27
2.3	GV-DSP Card	29
2.4	GV-A16 Card	32
2.5	GV-Net Card	34
2.6	GV-Net/IO Card	37
2.7	GV-IO 12-In Card	41
2.8	GV-IO 12-Out Card	44
2.9	GV-Net Box	47
2.10	GV-I/O and GV-Relay Module	49
2.11	GV-Hub Box	52
2.12	GV-COM Box	56
2.13	GV-Data Capture V2 Box	59
2.14	GV-Data Capture V2E Box	59
2.15	GV-Keyboard	60
2.16	GV-IR Remote Control	60

Chapter 3 Software Installation

3.1	Before You Start	62
3.2	Installing the System	63
3.3	Program List	65

Chapter 4 Screen Overview

4.1	Main System	68
4.2	ViewLog	70
4.3	Remote Playback Client	74
4.4	SingleView MPEG4 Encoder Viewer	76
4.5	MultivView MPEG4 Encoder Viewer	78
4.6	Remote Playback on WebCam	80
4.7	Center V2	82
4.8	Control Center Toolbar	84

Troubleshooting	85
------------------------	-------	----