

Function Name	Function Description
NTP auto resume connecting once it failed.	NTP auto resumes connection once it fails. It is to guarantee NTP function is OK.
Support more analog cameras.	Add motion detection alarm via coaxial cable, support IR detection camera.
Perfect coaxial control	The optimized coaxial protocol can control more analog cameras.
Front-end camera IVS	Support intelligent camera
Optimize digital Channel connection capability.	HCVR5232 support 32 digital channels The default bit stream is 1080P/4M; one channel max supports 5M.